

AEROTRAK™ Handheld Airborne Particle Counter

Model 9306

Operation Manual

P/N 6002278, Revision B
January 2009



AEROTRAK™ Handheld Airborne Particle Counter

Model 9306

Operation Manual

P/N 6002278, Revision B
January 2009

SHIP TO/MAIL TO:

TSI Incorporated
500 Cardigan Road
Shoreview, MN 55126-3996
USA

U.S.

Technical Support:

(800) 874-2811/(651) 490-2811

Fax:

(651) 490-3824

E-mail address:

aerotrak@tsi.com

Website:

<http://www.tsi.com>

INTERNATIONAL

Technical Support:

(001 651) 490-2811

Fax:

(001 651) 490-3824



TRUST. SCIENCE. INNOVATION.

Manual History

The following is a manual history of the AEROTRAK™ Handheld Airborne Particle Counter, Model 9306 Operation Manual (P/N 6002278).

Revision	Date
A	November 2008
B	January 2009

Warranty

Part Number

6002278 / Revision B / January 2009

Copyright

©TSI Incorporated / 2008-2009 / All rights reserved.

Address

TSI Incorporated / 500 Cardigan Road / Shoreview, MN 55126 / USA

E-mail Address

aerotrak@tsi.com

Limitation of Warranty and Liability

(effective July 2000)

Seller warrants the goods sold hereunder, under normal use and service as described in the operator's manual, shall be free from defects in workmanship and material for (12) months, or the length of time specified in the operator's manual, from the date of shipment to the customer. This warranty period is inclusive of any statutory warranty. This limited warranty is subject to the following exclusions:

- a. Hot-wire or hot-film sensors used with research anemometers, and certain other components when indicated in specifications, are warranted for 90 days from the date of shipment.
- b. Parts repaired or replaced as a result of repair services are warranted to be free from defects in workmanship and material, under normal use, for 90 days from the date of shipment.
- c. Seller does not provide any warranty on finished goods manufactured by others or on any fuses, batteries or other consumable materials. Only the original manufacturer's warranty applies.
- d. Unless specifically authorized in a separate writing by Seller, Seller makes no warranty with respect to, and shall have no liability in connection with, goods which are incorporated into other products or equipment, or which are modified by any person other than Seller.

The foregoing is IN LIEU OF all other warranties and is subject to the LIMITATIONS stated herein. **NO OTHER EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR PARTICULAR PURPOSE OR MERCHANTABILITY IS MADE.**

TO THE EXTENT PERMITTED BY LAW, THE EXCLUSIVE REMEDY OF THE USER OR BUYER, AND THE LIMIT OF SELLER'S LIABILITY FOR ANY AND ALL LOSSES, INJURIES, OR DAMAGES CONCERNING THE GOODS (INCLUDING CLAIMS BASED ON CONTRACT, NEGLIGENCE, TORT, STRICT LIABILITY OR OTHERWISE) SHALL BE THE RETURN OF GOODS TO SELLER AND THE REFUND OF THE PURCHASE PRICE, OR, AT THE OPTION OF SELLER, THE REPAIR OR REPLACEMENT OF THE GOODS. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES. SELLER SHALL NOT BE RESPONSIBLE FOR INSTALLATION, DISMANTLING OR REINSTALLATION COSTS OR CHARGES. No Action, regardless of form, may be brought against Seller more than 12 months after a cause of action has accrued. The goods returned under warranty to Seller's factory shall be at Buyer's risk of loss, and will be returned, if at all, at Seller's risk of loss.

Buyer and all users are deemed to have accepted this LIMITATION OF WARRANTY AND LIABILITY, which contains the complete and exclusive limited warranty of Seller. This LIMITATION OF WARRANTY AND LIABILITY may not be amended, modified or its terms waived, except by writing signed by an Officer of Seller.

Service Policy

Knowing that inoperative or defective instruments are as detrimental to TSI as they are to our customers, our service policy is designed to give prompt attention to any problems. If any malfunction is discovered, please contact your nearest sales office or representative, or call TSI's Customer Service department at 1-800-874-2811 (USA) or +001 (651) 490-2811 (International).

Trademarks

AEROTrak and TRAKPro are trademarks of TSI Incorporated. TSI and the TSI logo are registered trademarks of TSI Incorporated. Microsoft and Excel are registered trademarks of Microsoft Corporation.

Contents

Manual History	ii
Warranty.....	iii
Safety Information	vii
Laser Safety	vii
Labels	viii
Description of Caution/Warning Symbols.....	viii
Caution	viii
Warning	viii
Caution or Warning Symbols.....	ix
Getting Help.....	ix
CHAPTER 1 Introduction and Unpacking.....	1-1
Unpacking the AEROTRAK™ Handheld Airborne Particle Counter.....	1-1
Optional Accessories	1-3
CHAPTER 2 Getting Started	2-1
Instrument Description	2-1
Using the Instrument Stand and Stylus	2-2
Providing Power.....	2-3
To Install the Lithium-Ion Battery	2-3
To Use AC Power	2-4
Using with a Printer	2-4
Performing a Zero Check	2-5
To Perform a Zero Check	2-5
Installing an Isokinetic Inlet	2-6
Installing a Temperature/Relative Humidity Probe	2-7
CHAPTER 3 Operation.....	3-1
Screen Layout and Functionality	3-1
Software Input Panel (Keyboard).....	3-2
Main Tab.....	3-2
Setup Tab.....	3-6
Data Tab	3-23
Reports Tab.....	3-25
CHAPTER 4 Data Handling	4-1
USB Computer Communication	4-1
Installing Software	4-1
Download Data.....	4-4
Delete Data	4-7

CHAPTER 5 Maintenance5-1
Maintenance Schedule5-1
Zero Check.....5-1
Cleaning the Instrument Enclosure5-1

CHAPTER 6 Troubleshooting6-1

CHAPTER 7 Contacting Customer Service7-1
Technical Contacts.....7-1
International Contacts.....7-1
Returning the AEROTRAK™ Handheld Airborne Particle
Counter for Service.....7-3

APPENDIX A Specifications A-1
Temperature/RH Probe (700031) Specifications
(optional accessory)A-2

Safety Information

This section gives instructions to promote safe and proper handling of the AERO^{TRAK}™ Handheld Airborne Particle Counters.

IMPORTANT

There are no user-serviceable parts inside the instrument. Refer all repair and maintenance to a qualified factory-authorized technician. All maintenance and repair information in this manual is included for use by a qualified factory-authorized technician.

Laser Safety

- The Model 9306 Handheld Airborne Particle Counter is a Class I laser- based instrument.
- During normal operation, you will **not** be exposed to laser radiation.
- Precaution should be taken to avoid exposure to hazardous radiation in the form of intense, focused, visible light.
- Exposure to this light may cause blindness.

Take these precautions:

- **DO NOT** remove any parts from the particle counter unless you are specifically told to do so in this manual.
- **DO NOT** remove the housing or covers. There are no user-serviceable components inside the housing.





WARNING

The use of controls, adjustments, or procedures other than those specified in this manual may result in exposure to hazardous optical radiation.

Labels

Advisory labels and identification labels are attached to the outside of the particle counter housing and to the optics housing on the inside of the instrument.

<p>1. Serial Number Label (back panel)</p>	 <p>AeroTrak OPC 9306-01 S/N: 93060849001 COMPLIES WITH 21 CFR 1040.10 AND 1040.11 U.S. Patent 6187107 TSI Inc., Shoreview, MN 55126, USA www.tsi.com Made in USA</p>
<p>2. Laser Radiation Label (internal)</p>	<div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>DANGER!</p> <p>VISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM</p> <p>WARNING: NO USER SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL</p> </div>
<p>3. European symbol for non-disposable item. Item must be recycled.</p>	

Description of Caution/Warning Symbols

Appropriate caution/warning statements are used throughout the manual and on the instrument that require you to take cautionary measures when working with the instrument.

Caution



C a u t i o n
<p>Failure to follow the procedures prescribed in this manual might result in irreparable equipment damage. Important information about the operation and maintenance of this instrument is included in this manual.</p>





Warning



W A R N I N G
<p>Warning means that unsafe use of the instrument could result in serious injury to you or cause damage to the instrument. Follow the procedures prescribed.</p>

Caution or Warning Symbols

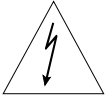The following symbols may accompany cautions and warnings to indicate the nature and consequences of hazards:

	Warns that uninsulated voltage within the instrument may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make contact with any part inside the instrument.
	Warns that the instrument contains a laser and that important information about its safe operation and maintenance is included in the manual.
	Warns that the instrument is susceptible to electro-static dissipation (ESD) and ESD protection procedures should be followed to avoid damage.
	Indicates the connector is connected to earth ground and cabinet ground.

Getting Help

To obtain assistance with this product or to submit suggestions, please contact Customer Service:

TSI Incorporated
500 Cardigan Road
Shoreview, MN 55126 U.S.A.
Fax: (651) 490-3824 (USA)
Fax: 001 651 490 3824 (International)
Telephone: 1-800-874-2811 (USA) or (651) 490-2811
International: 001 651 490 2811
E-mail Address: aerotrak@tsi.com
Web site: www.tsi.com

CHAPTER 1

Introduction and Unpacking

The AEROTRAK™ Model 9306 Airborne Particle Counter (particle counter) is a lightweight, handheld particle counter with a touch-screen interface. It operates on the included lithium-ion battery or AC power.

This device has a 0.1 CFM (2.83 L/min) flow rate and counts bin sizes from 0.3 to 10 µm that depend on the model ordered (see table below). Up to 10,000 data sets can be downloaded for analysis and reporting using the TRAKPRO™ Lite Data Download Software included with the device.

Model	Size Range
9306-01	0.3, 0.5, 0.7, 1.0, 2.0, 5.0 µm
9306-02	0.3, 0.5, 1.0, 3.0, 5.0, 10.0 µm
9306-V	0.3 to 10 µm, user-selectable; factory-calibrated at 0.3, 0.5, 1.0, 3.0, 5.0, 10.0 µm



Typical applications for this particle counter include cleanroom monitoring, research, exposure assessment, indoor air quality, filter testing, clearance testing, quality assurance, and contaminant migration studies. All AEROTRAK™ particle counters meet JIS standards.

Unpacking the AEROTRAK™ Handheld Airborne Particle Counter

Carefully unpack the AEROTRAK™ Airborne Particle Counter from the shipping container and verify that all the items shown in the photos below and listed in the following tables are present. Contact TSI immediately if items are missing or broken.

Model 9306 AEROTRAK™ Airborne Particle Counter Parts List

Qty.	Item Description	Part/Model	Reference Picture
1	AEROTRAK™ Airborne Particle Counter	9306-01 9306-02 9306-V	
1	Power Cord	700057 (US) 700058 (UK) 700059 (Euro)	
1	AC power adapter	700022	
1	Isokinetic inlet	700003	
1	Battery pack	700032	
1	Computer cable (2 m), USB A to B	700033	
1	Stylus	N/A	
1	HEPA zero filter assembly	700005	
1	TRAKPRO™ Lite data download utility CD (includes manual)	7001384	
1	Operation Manual	6002278	(installed on TRAKPRO™ Lite CD)






Qty.	Item Description	Part/Model	Reference Picture
1	Calibration certificate	N/A	
1	Quick Start Guide	6002239	

Optional Accessories

The following photos and table list optional accessories. If you ordered optional accessories, make certain they have been received and are in working order.

Model 9306 AEROTRAK™ Airborne Particle Counter Optional Accessories

Item Description	Part/Model	Reference Picture
External battery charger with AC adapter and power cord	700025	
External Printer	8930	
Heavy Duty Carry case	700023	
Printer paper (10 rolls)	700027	

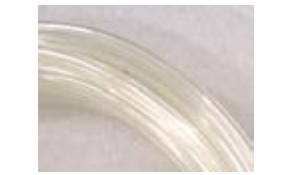Item Description	Part/Model	Reference Picture
Temperature/humidity probe	700031	
Stainless Steel Isokinetic inlet	700004	
Stainless Steel Isokinetic probe (used with tubing)	700002	
0.1 cfm Barb Inlet Fitting	700020	
Tubing, Superthane 1/8-inch ID x 1/4-inch OD, Clear 100 ft	700009	

CHAPTER 2

Getting Started

This chapter provides information to help you use the Model 9306 AEROTRAK™ Handheld Airborne Particle Counter including:

- [Instrument Description](#)
- [Using the Instrument Stand and Stylus](#)
- [Providing Power](#)
- [Performing a Zero Check](#)
- [Installing an Isokinetic Inlet](#)
- [Installing a Temperature/Relative Humidity Probe](#)

Instrument Description

The Model 9306 has many features to make measurements convenient. They are described in detail below.



Using the Instrument Stand and Stylus

The Model 9306 is equipped with an integral instrument support stand. To open the stand, grasp it by the large finger hole and pull it out until it locks into place. Be careful not to overextend the stand. To store the stand out of the way when not in use, simply push the stand back until it snaps into place.



The Model 9306 is also equipped with a plastic stylus for use with the touch screen interface. The stylus locks into place in the case near the top of the unit when not in use.



Providing Power

The Model 9306 may be powered using a rechargeable lithium-ion battery, or through an AC power cord.

Notes:

- When using AC power, the battery (if installed) charges when the instrument is on, but not while actively sampling.
- Removing/changing the lithium-ion battery or disconnecting AC power does not cause loss of data.

To Install the Lithium-Ion Battery

1. Remove the battery cover from the back of the instrument by lightly depressing the textured tab on the cover located on the lower left.



2. Slide the lithium-ion battery into the slot, press down lightly and slide it forward (toward the top of the unit) until it locks into place.
3. Replace the battery cover and slide it in place until you hear a click.



WARNING

The battery supplied by TSI (PN 700032) has built in protection against explosion and fire hazard. Do **not** use a substitute.




W A R N I N G

Do **not** use non-rechargeable batteries in this instrument. Fire, explosions, or other hazards may result.

To Use AC Power

1. Connect the AC power adapter to the power cord.
2. Insert the AC power adapter into the bottom of the Model 9306.
3. Connect the power cord to an outlet.



4. Press the on/off button  (located in the center of the front of the instrument).
5. After a splash screen displays the TSI logo, a brief start-up sequence begins as the Windows® CE operating system boots up.

Using with a Printer

A hard copy of a sample set can be printed from the instrument using the optional TSI Model 8930 thermal printer (see Chapter 3, [“Operation”](#)). Only the TSI Model 8930 printer is compatible with the Model 9306. The printer may be used with batteries or an AC adapter. A custom communications cable is included with the printer. The six-pin connector mates with the printer and the eight-pin connector mates with the Model 9306.



C a u t i o n

The printer connector in the Model 9306 is the same as that used for Ethernet cables. Do **not** connect an Ethernet cable to the instrument.



Performing a Zero Check

A zero check should be performed at least once a day. It should also be performed before conducting any important testing or certification.

To Perform a Zero Check

1. Turn on the instrument and wait until the main menu appears.
2. Remove the Isokinetic inlet if attached. The zero check cannot be performed when the isokinetic inlet is attached to the instrument.
3. Attach the zero filter to the inlet nozzle located on the top of the instrument.



4. Press the **Start** button and allow the instrument to purge for 2 minutes.
5. After the 2-minute purge, continue to sample. In accordance with JIS standards, there should be no more than 1 particle counted at any size in 5 minutes.
Note: If the instrument does not go to zero (1 particle in 5 minutes is considered zero), refer to Chapter 6, [Troubleshooting](#), for additional information.
6. Remove the zero filter and put the isokinetic inlet back on; the instrument is now ready for operation.

Installing an Isokinetic Inlet

The Isokinetic inlet smoothly accelerates air into the inlet of the instrument. To install, simply thread the inlet directly onto the inlet nozzle until finger tight. The inlet seals over an o-ring so it doesn't have to be very tight to seal.



Installing a Temperature/Relative Humidity Probe

To install the optional temperature/relative humidity probe:

1. Align the small red dot at the base of the probe to the corresponding red dot on the socket.
2. Press the probe into the socket until it clicks.
3. Temperature and relative humidity are automatically displayed in the upper-left corner.
4. Remove the probe by pulling straight up.



CHAPTER 3

Operation

The Model 9306 AEROTRAK™ Handheld Airborne Particle Counter is controlled using a touch screen display. Use the plastic stylus or your finger tip. **DO NOT** use sharp objects (such as a pen point) that may damage the screen overlay.

To turn on the instrument, press the **on/off** button (located in the center of the front of the instrument). After a splash screen displays the TSI logo, a brief start-up sequence begins as the Windows® CE operating system boots up.

The instrument is ready for operation when the main tab (shown below) appears. If an optional temperature/humidity probe is attached, those values will be shown in the upper-left corner also.

		11/20/08 11:43:03 AM
		Automatic
μm	Σ	Location
0.3	0	
0.5	0	
1.0	0	Delay: 00:00:05
3.0	0	Count: 0/10
5.0	0	Time: 00:01:00
10.0	0	Hold: 00:00:10
		Recs: 123/10000
Main		Setup
		Data
		Reports

Screen Layout and Functionality

There are four main screens (tabs): Main, Setup, Data, and Reports. The operation of each of these screens, the information displayed on them, and the operations you can perform from each are described in the remainder of this chapter.

Some screens require or allow you to enter information. To enter information, tap on the screen and an on-screen keyboard appears.

Software Input Panel (Keyboard)

Throughout the setup screens, a keyboard will appear on the screen when text may be entered. Data may be entered using this keyboard. When the entry is complete, press either the ↵ (**Enter**) or **Esc** keys. The keyboard will then be hidden until another text entry box is selected.



Main Tab









The Main Tab is the default screen. The left side of the screen summarizes the concentrations for the currently selected location. Tap on the size and count portion of the screen to enable Zoomed Data Screen (see [Setup Tab](#)).

The display shows:



- Temperature*
- Relative humidity*
- Bin sizes
- Particle count/concentration



The status bar at the top of the screen shows the current time and date settings (see the [Setup Tab](#)) and indicates:

*Temperature and Humidity are displayed only if the optional T/H probe is installed.

Icon	Description
	Laser requires service
	Sufficient flow through the Model 9306
	Insufficient flow through the Model 9306
	Operating on AC power, no battery installed
	Operating on AC power, battery is installed and charging
	Battery charged
	Low battery
	Battery must be charged

The right side of the Main Tab shows locations and other information (delay, cycles, and so on). These can be configured using the Setup Tab.

Sampling		11/20/08 11:45:57 AM	
23.9 °C		Sampling	
52 %RH		Automatic	
µm	Σ	Location	
0.3	107623	Loc001	
0.5	8300	Delay:	00:00:00
1.0	613	Count:	1/10
3.0	48	Time:	00:00:57
5.0	14	Hold:	00:00:10
10.0	6	Recs:	1/10000
Main	Setup	Data	Reports

Field	Description
Location	Use this dropdown box to display information about any of the available locations.
Delay	The initial delay between the time the Start button is pressed and the instrument begins sampling. Valid only when Automatic mode is selected.
Count	The number of samples that have been taken/the total number of samples. Valid only when Automatic mode is selected.
Time	The time for each sample. Valid only when Automatic mode is selected.
Hold	The time between samples. Valid only when Automatic mode is selected.
Recs	The total number of records in the database/10000 (maximum number of records).
Manual/Automatic/Beep	Mode Indicator refers to the "Data Count Mode" (see section below).
	Press the Start/Stop button the begin sampling in the configured mode. Start/Stop may also be entered using the triangle-shaped button above the power button on the front of the instrument.
	Prints the current sample to the optional printer.



Zoomed Data Screen



The Zoomed Data screen is entered by touching in the size and count part of the main tab display. The bottom portion of the screen summarizes the concentrations for the currently selected location. Tap the size and count portion of the display to switch back to the Main Tab display.

The display shows:


- Temperature*
- Relative humidity*
- Bin sizes
- Particle count/concentration

*Temperature and Humidity are displayed only if the optional T/H probe is installed.

Sampling		11/18/08 02:25:07 PM
25.0 °C		Unknown 
45 %RH		
μm	Δ	Σ
0.5	5597	5671
1.0	17	74
3.0	37	57
5.0	12	20
10.0	8	8
Main	Setup	Data Reports

Field	Description
	Prints the current sample to the optional printer.
Location	Label that displays information about the currently selected location.
	Press the Start/Stop button the begin sampling in the configured mode.

Setup Tab

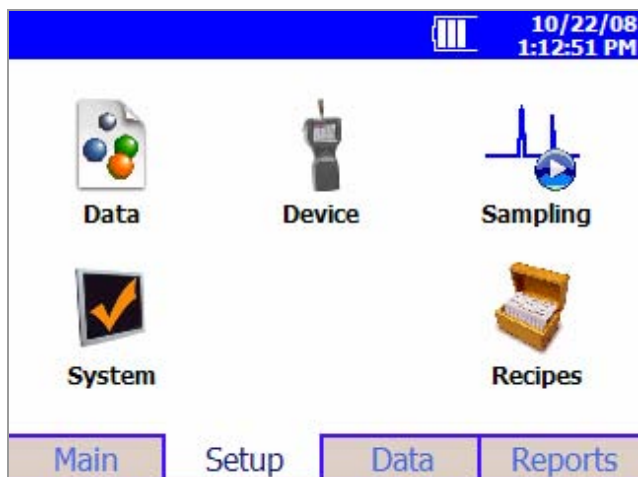

The setup tab provides access to the following:

Data Setup	View Count Units and Clear Samples.
System Setup	Change Power On Password, Setup Password, System Configuration, Print Settings, and Print Schedule.
Device Setup	Set Visual, Date and Time, and Diagnostics.
Sampling Setup	Set up Particle Channels, Sample Timing, Sample Count Mode, Environment, Locations, and Particle Channel Alarms.
Recipes	Save a group of settings (recipes) that you use over and over so you don't have to reset individual settings.

Data Setup Screen

This screen lets you access the Count Units screen and the Clear Samples screen.



Count Units Screen

This screen lets you set the way in which particle concentration information is displayed.


Field	Description
Differential	Select to display particle concentration as a differential Δ (the total number of counts is the number of particles <i>between</i> bin sizes).
Cumulative	Select to display particle concentration as cumulative Σ (the total number of counts includes all particles larger than the bin size).
Concentration	Display concentration in ft^3 or m^3 . If Beep mode is selected, display of concentration values is not allowed.

Clear Samples Screen

The Clear Samples screen lets you clear all samples from the internal database. Select **Yes** to clear all samples. Select **No** to return to the Data Setup screen.

System Setup Screen

From the System Setup screen you can select (or change) the power on password, set up a password, select system configuration parameters, select print settings, and schedule printing.

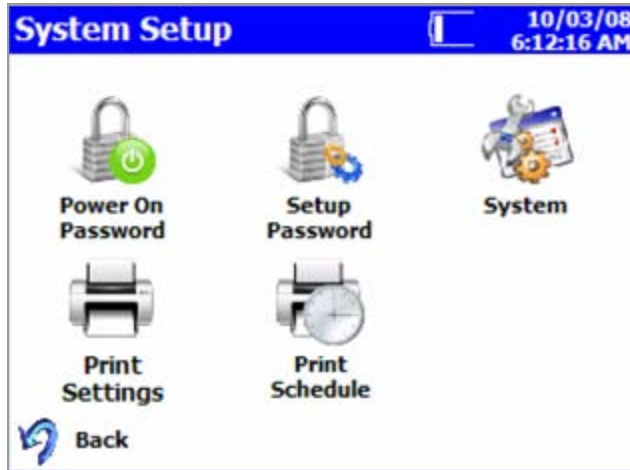


Change Power On Password Screen

If a Power On password has been previously set, you must enter that password before being allowed to change the Power On password. If a Power On password is set, then on instrument startup a password screen will ask for the password before the instrument can be used. A blank password is regarded as no password and if set as the new password, will not prompt you for a password on system startup.

Note

Keep the password in a safe place. It is difficult to reset the password and requires contacting the factory. If you have misplaced the password, please contact TSI technical support.

Tap on the screen to display the on-screen keyboard and enter the required information.

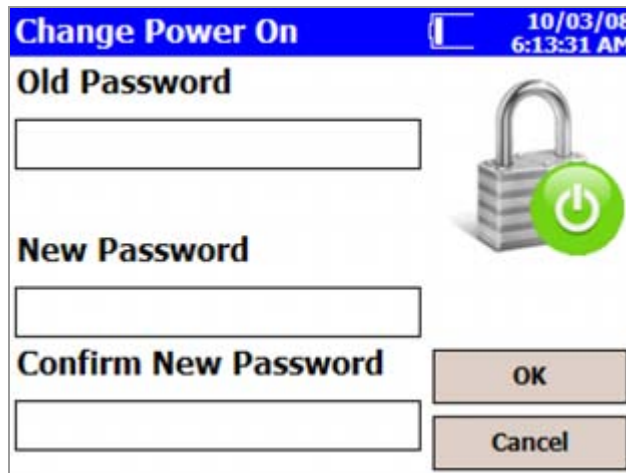

Field	Description
Old Password	Enter your existing password (if one has already been set).
New Password	Enter a new password. The password can be any length and use any characters.
Confirm New Password	Retype the new password then press OK . A confirmation message appears if the password is changed.

Change Setup Password Screen

If a Setup password has been previously set, you must enter that password before being allowed to change the Setup password. If a Setup password is set, clicking on the setup tab at the bottom of the main screen brings up a password screen. That password must be entered in order to change instrument settings.

Tap on the screen to display the on-screen keyboard and enter the required information.

Field	Description
Old Password	Enter your existing password. (if one has already been set).
New Password	Enter a new password The password can be any length and use any characters.
Confirm New Password	Retype the new password then press OK . A confirmation message appears if the password is changed.

Note
Entering a blank password will turn off password protection.

System Configuration Screen

Use this screen to set system configuration parameters. Press **OK** when finished.

System 1/23/09 12:38:19 PM

Δ and Σ on Zoom

Store Partial Samples

Defaults


OK

Cancel

Field	Description
Δ and Σ on Zoom	Select to zoom in on both cumulative (Σ) and differential (Δ) counts on the Main Tab. To zoom the Main Tab, click on the left side of the Main Tab. (It takes a moment for the screen to update.) Click on the screen again to return to normal view.
Store Partial Samples	When selected, if the instrument is stopped during a sampling period, the record will be stored in the instrument's database.

Print Settings Screen

A hard copy of a sample set or statistics can be printed from the instrument using an optional thermal printer. Use this screen to set print parameters. Press **OK** when finished.


Print Settings		10/24/08 7:41:42 AM
<input checked="" type="checkbox"/> Serial Number		<input type="button" value="Defaults"/> <input type="button" value="OK"/> <input type="button" value="Cancel"/>
<input checked="" type="checkbox"/> Model Name		
<input checked="" type="checkbox"/> Separator		
<input type="checkbox"/> Differential		
<input checked="" type="checkbox"/> Cumulative		

Field	Description
Serial Number	Indicates that the serial number of the particle counter used to collect the data will be printed.
Model Name	Indicates that the model number of the particle counter used to collect the data will be printed.
Separator	Indicates a line separator will be printed after the Model Name and Serial Number in the header of all printouts
Differential	Indicates that the differential value of the data will be printed.
Cumulative	Indicates that the cumulative value of the data will be printed.

Note: *Printer paper has a colored strip printed on the last few feet of each roll to indicate when it is time to change the paper roll.*

Print Schedule Screen


Use this screen to schedule automatic printing. You can choose to either print when an alarm occurs or print whenever a sample is complete.

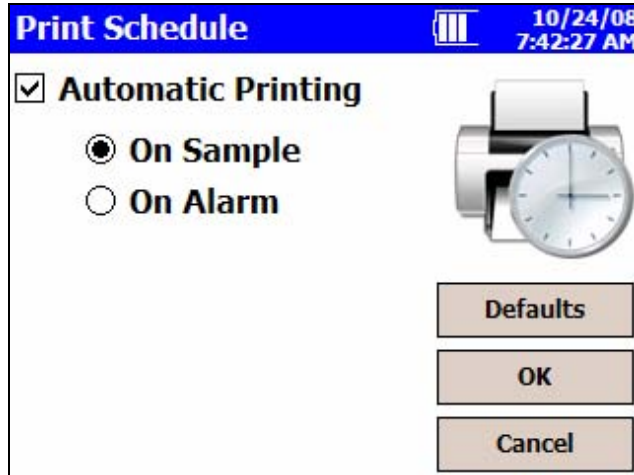

Field	Description
Automatic Printing	Enables automatic printing
On Alarm	Print data when an alarm condition occurs.
On Sample	Print data whenever a sample completes.

Device Setup Screen

Use this screen to access screens that let you set or change the date and time, make audio visual selections, and run diagnostics.

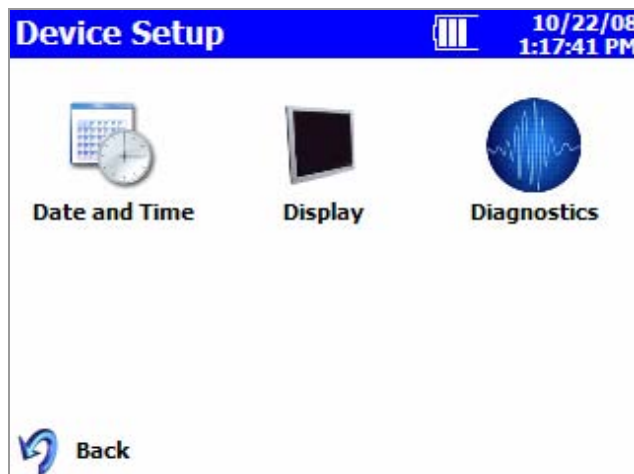


Date and Time Screen


This screen lets you set the current date and time and set the date format. Press **OK** when finished. You can select options using the arrows or tapping on the screen.

Field	Description
Date	Press the down arrow to display a calendar then select the date from the calendar.
Time	Select the time component you want to change (hours; minutes; seconds) and then use the left and right arrows to adjust to the current time.
Date Format	Highlight the date format you want to use from the list.
24 Hour	Time display is in 24 hour format.

Display Screen


This screen lets you set or change visual parameters

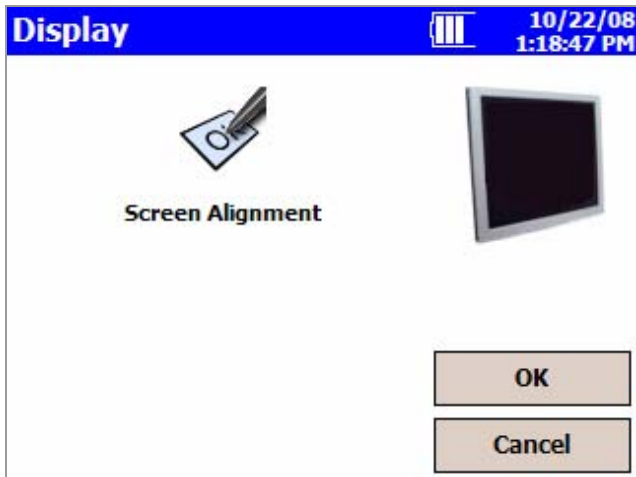

Field	Description
	Press this item to reset the screen alignment, and follow the directions on the alignment screen.

Diagnostics Screen

This screen lets you view the system's model, serial number, copyright, manufacture date, calibration date, next calibration date, firmware version, and USB IP address. Press **Close** when finished.

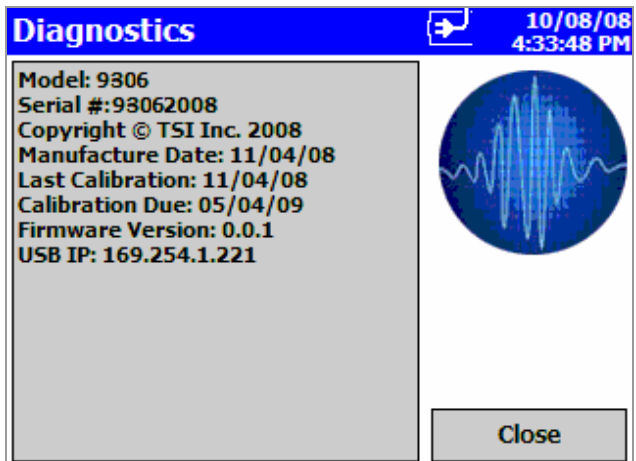


Sampling Screen

Use this screen to access screens that let you set up how sampling is displayed and handled. You can select which channels to use, the sample timing, the count mode, environment, sampling locations, and alarm thresholds.



Channels Screen

This screen lets you choose the channels that are enabled and set their particle size. Press **OK** when finished.

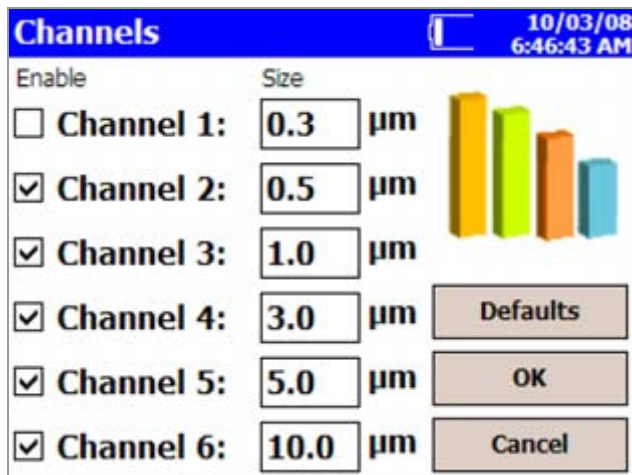

Field	Description
Enable	Select the channels you want to view on the main display.
Size	If the instrument model allows variable bin sizes, this box allows for changing the default size for any channel. Highlight the size information and use the on-screen keyboard to change its value. Channels cannot be set below 0.3 or above 10.0 µm and they may not overlap one another.


Sample Timing Screen

This screen lets you select parameters for sampling. Use the up and down arrows or the on-screen keyboard to change or enter information. These parameters are only valid when the Model 9306 is running in Automatic mode. Press **OK** when finished.

Field	Description
Count	Count is the total number of samples you want collected. In Automatic mode, a Count value of 0 will cause the instrument to count continuously using the settings for Delay, Time, and Hold until the Start/Stop button is pressed again. Use the up and down arrows or the on-screen keyboard to set the count.
Delay	Delay indicates how long it will be before the first sample is taken. Remember, it takes approximately 6 seconds for the pump to reach the flow set point; taking a measurement before the pump is functioning properly may result in a data error. Highlight the time component you want to change (hours, minutes, seconds) and use the up and down arrows or the on-screen keyboard to change the value.
Hold	Hold indicates how long the instrument pauses between samples. Highlight the time component you want to change (hours, minutes, seconds) and use the up and down arrows or the on-screen keyboard to change the value.
Time	Time indicates the duration of each sample run (count particles). Highlight the time component you want to change (hours, minutes, seconds) and use the up and down arrows or the on-screen keyboard to change the value.
Volume	Volume sets the volume of air that will pass through the instrument for each sample. If you select volume, you must select Cubic Feet, Cubic Meters or Cubic Liters for measurement using the arrows.

Count Mode Screen


Use this screen to set the sample count mode. Press **OK** when finished.

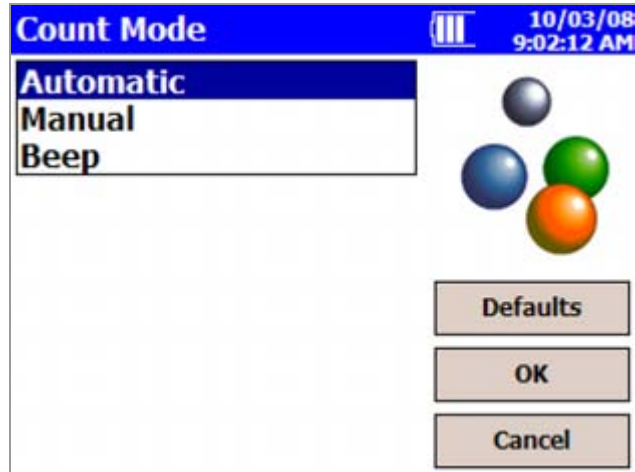

Field	Description
Automatic	If you select this mode, the Model 9306 starts counting in automatic mode when you press the start button according to the setting on the Sample Timing Screen .
Manual	If you select this mode, the Model 9306 starts sampling immediately when you press the start button and stops at the end of the sample time, which is configured on the Sample Timing Screen.
Beep	If you select this mode, the Model 9306 starts sampling data immediately and beeps whenever the threshold for the smallest bin is reached, as specified in Alarms Screen. This can be very useful when searching for leaks, especially around filters. If this mode is selected, Display mode is set to Particle Counts while in Beep mode.

Environment Screen


Use this screen to set the units for temperature, which is displayed on the Main Tab, and the printouts when a humidity and temperature probe is hooked up to the instrument.

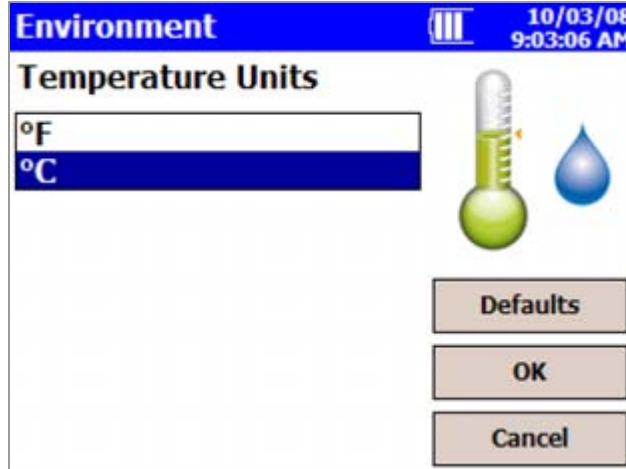

Field	Description
°F	Display temperature in degrees Fahrenheit.
°C	Display temperature in degrees Celsius.


Locations Screen

Associating collected samples with labeled locations can help keep your data organized. The Model 9306 allows you to create up to 250 labeled locations (up to 10 characters in length). Use this screen to add, remove, or modify a location names to the list of locations.

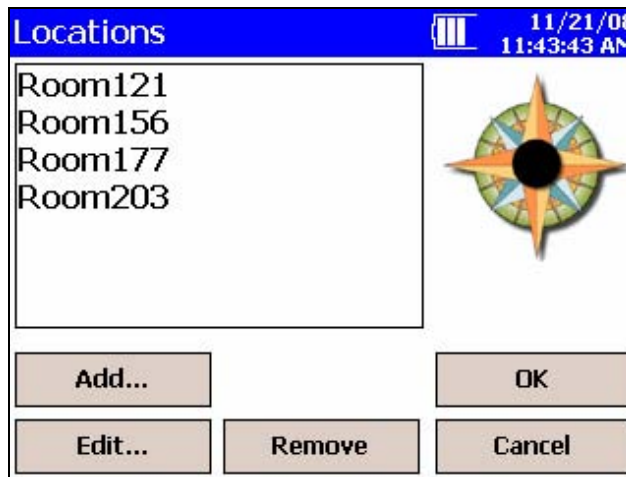


To modify a location name, highlight the name in the list, then click the **Edit...** button. In the "Enter Location" screen click the

edit box in the middle and use the on-screen keyboard to modify a location name. (You cannot edit the empty location). Click **OK** when finished.

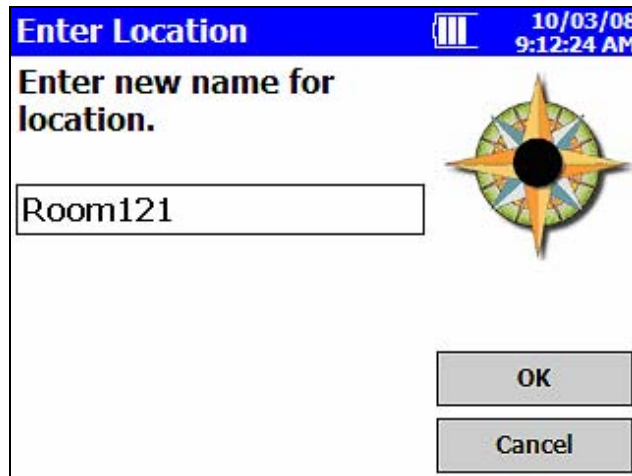

To add a location, click on the **Add..** button . In the “Add Location” screen click in the edit box in the middle and use the on-screen keyboard to add a location name. Click **OK** when finished.

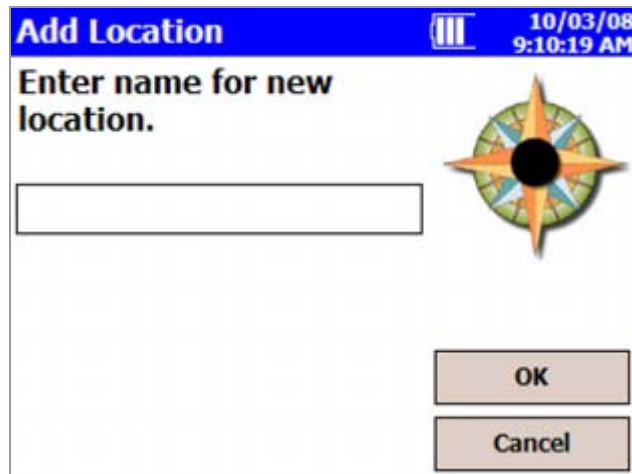

To remove a location, click on location to be removed and click the **Remove** button.

Back in the main Locations screen, after all editing has been completed, press **OK** when finished.

Alarms Screen

Use this screen to set the alarm threshold for each channel. Press **OK** when finished.

Enable	Threshold
<input type="checkbox"/> 0.3	1000
<input type="checkbox"/> 0.5	1000
<input type="checkbox"/> 1.0	1000
<input type="checkbox"/> 3.0	1000
<input type="checkbox"/> 5.0	1000
<input type="checkbox"/> 10.0	1000

Buttons: Defaults, OK, Cancel

Alarm Icon:

Header: Alarms, 10/03/08, 9:20:26 AM


Field	Description
Enable	Select the channels on which you want to enable alarms.
Threshold	To change the threshold for any channel, click the up and down arrows for that channel or use the on-screen keyboard to change its value. The threshold value units use the current display Count Units (see Count Units Screen).

When a channel value exceeds the threshold value you set, the channel data is highlighted in red on the Main tab, an audible alarm sounds, and the alarm icon appears on the Main tab.

To clear the alarm, click the alarm icon . In addition, the record is printed if you have selected that option on the [Print Schedule Screen](#).

Recipe Screen


Use this screen to load and save recipes. Recipes let you save a group of settings (recipe) that you use over and over so you don't have to reset individual settings. There may be up to 100 recipes stored in the unit.

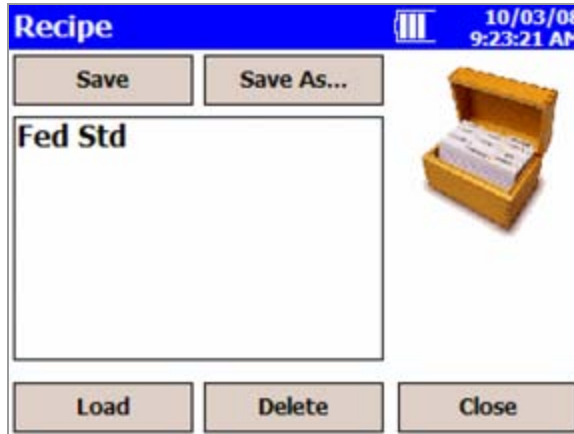

Field	Description
Save	<p>When you select Save, a new window opens that lets you enter a name for the recipe you want to save. The settings/parameters that are saved include:</p> <p>For each channel (1-6):</p> <ul style="list-style-type: none"> • Alarm setting (on/off) • Alarm threshold (value) • Channel setting (enabled/disabled) • Channel threshold (value) <p>Sample Timing settings</p> <ul style="list-style-type: none"> • Count mode • Count total • Start delay (in secs) • Hold delay (in secs) • Sample time (in secs) <p>Count Mode/Units Settings</p> <ul style="list-style-type: none"> • Display normalized • Units (count, ft³ or m³) • Cumulative/Differential • Volume units <p>Printing settings</p> <ul style="list-style-type: none"> • Auto print and mode • Print cumulative/differential • Print reverse setting (if supported) • Print model, separator, serial number
Save As	<p>When you select Save As, a new window opens that lets you enter a name for the recipe you want to save.</p>
Load	<p>Highlight the recipe you want to load and press Load. The settings/parameters are reset to the values of that recipe.</p>
Delete	<p>Highlight the recipe you want to delete and press Delete. The recipe is deleted.</p>


Data Tab

The Data tab lets you preview data that has been collected. Use the elevator (slide) on the right to scroll through the records. The record number is displayed at the bottom of the tab. As each record displays, its data and relevant parameters are displayed.


11/18/08 02:07:02 PM			
m³	Size μm	Δ m³	Σ m³
	0.3	275695	286863
	0.5	9733	11168
	1.0	1214	1435
	3.0	53	221
	5.0	145	168
	10.0	23	23
Print			
Location: Sample 003 Laser: OK Alarm: YES Sample: 00:01:00 Vol: 131.0 L Flow: ALRM Date: 11/18/08 Temperature: 24.4 °C Time: 11:59:56 AM Humidity: 53 %			
Record: 20 Records: 123 / 10000			
Main Setup Data Reports			

Field	Description
#, ft ³ , m ³	Button used to change between counts and concentration displays.
Size μm	Channel size.
Δ	Differential concentration.
Σ	Cumulative concentration.
Location	Location where the data was collected.
Sample	Duration of the sampling period.
Date	Date on which the data was collected.
Time	Time at which data was collected.
Temperature	Temperature at the end of the time the data was collected (if probe connected during sampling).
Humidity	Humidity level at the end of the time the data was collected (if probe connected during sampling).
Flow	Status of the flow.
Alarm	Alarm threshold was triggered (YES) or not (NONE).
Laser	Status of the laser.

The print button will allow a range of sample data to be printed using the optional 8930 external printer.

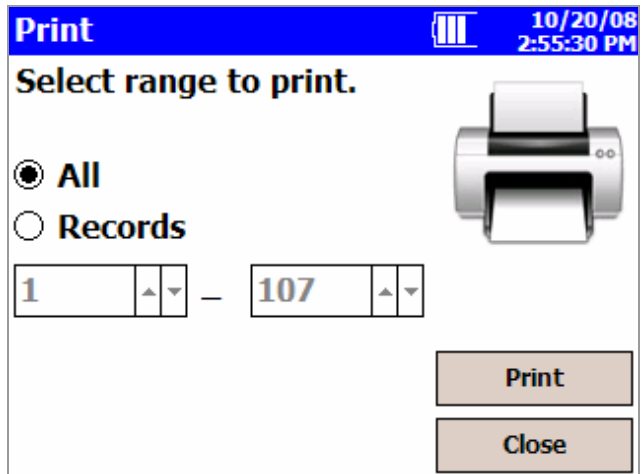


The print data screen will show progress on the current selected range of sample data to be printed. Press the **Cancel Printing** button to cancel the rest of the print job.


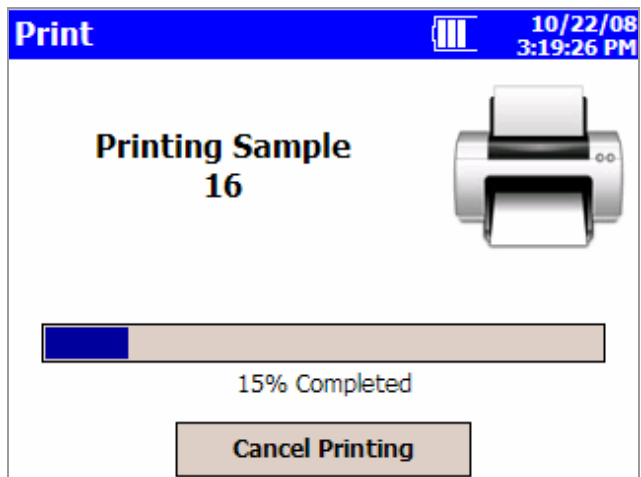





Reports Tab

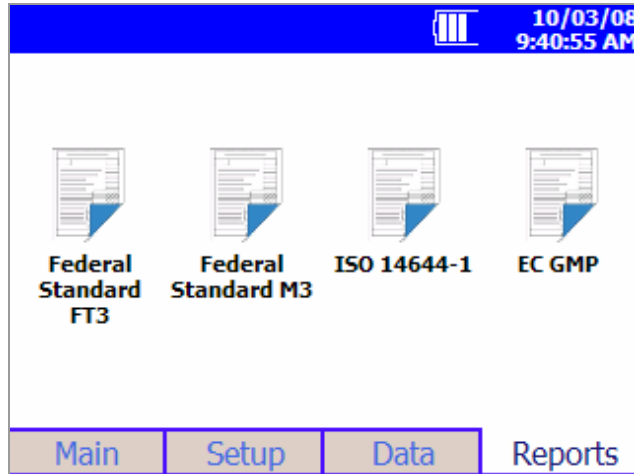


Use this screen to select various standard reports for viewing and printing.

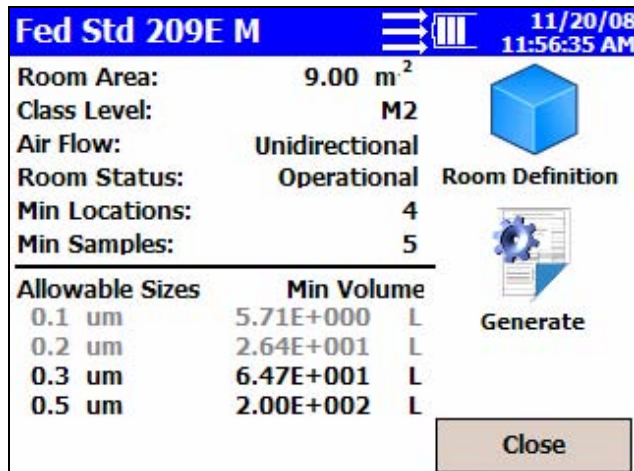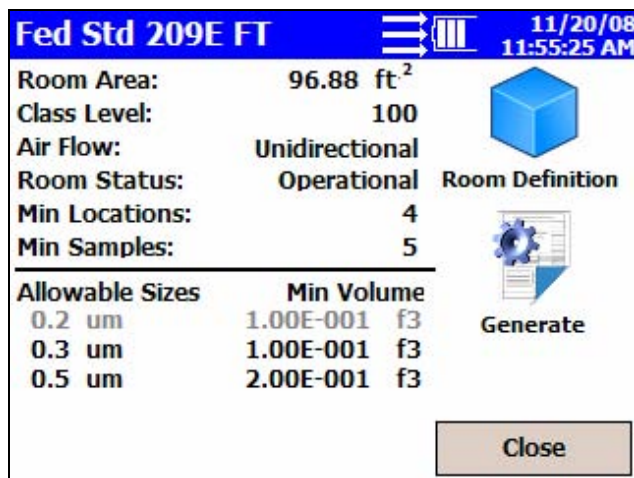

The standard reports are shown below:



ISO 14644-1		11/20/08 09:00:51 AM																		
Room Area:	9.00 m ²	 Room Definition																		
Class Level:	3																			
Air Flow:	Unidirectional																			
Room Status:	At-Rest																			
Min Locations:	3																			
Min Samples:	3																			
<table border="1"> <thead> <tr> <th>Allowable Sizes</th> <th>Min Volume</th> <th></th> </tr> </thead> <tbody> <tr> <td>0.1 um</td> <td>2.00E+001</td> <td>L</td> </tr> <tr> <td>0.2 um</td> <td>8.44E+001</td> <td>L</td> </tr> <tr> <td>0.3 um</td> <td>1.96E+002</td> <td>L</td> </tr> <tr> <td>0.5 um</td> <td>5.71E+002</td> <td>L</td> </tr> <tr> <td>1.0 um</td> <td>2.50E+003</td> <td>L</td> </tr> </tbody> </table>		Allowable Sizes	Min Volume		0.1 um	2.00E+001	L	0.2 um	8.44E+001	L	0.3 um	1.96E+002	L	0.5 um	5.71E+002	L	1.0 um	2.50E+003	L	 Generate
Allowable Sizes	Min Volume																			
0.1 um	2.00E+001	L																		
0.2 um	8.44E+001	L																		
0.3 um	1.96E+002	L																		
0.5 um	5.71E+002	L																		
1.0 um	2.50E+003	L																		
																				

EC-GMP		11/20/08 09:01:59 AM									
Room Area:	9.00 m ²	 Room Definition									
Class Level:	C										
Air Flow:	Unidirectional										
Room Status:	At-Rest										
Min Locations:	3										
Min Samples:	3										
<table border="1"> <thead> <tr> <th>Allowable Sizes</th> <th>Min Volume</th> <th></th> </tr> </thead> <tbody> <tr> <td>0.5 um</td> <td>2.00E+000</td> <td>L</td> </tr> <tr> <td>5.0 um</td> <td>6.90E+000</td> <td>L</td> </tr> </tbody> </table>		Allowable Sizes	Min Volume		0.5 um	2.00E+000	L	5.0 um	6.90E+000	L	 Generate
Allowable Sizes	Min Volume										
0.5 um	2.00E+000	L									
5.0 um	6.90E+000	L									
											

Field	Description
Room Area	Displays the area of the room in ft ² or m ² .
Class Level	Depends on the report definition, see below.
Air Flow	Displays the airflow characteristics of the room.
Room Status	Displays the status of the room. See Room Definition below.
Min Locations	Displays the minimum number of locations that must be sampled in the room.
Min Samples	Displays the minimum number of samples that must be taken at each location.
Min Vol. per channel	Allowable channel sizes for the selected Class Level for that Standard.
Room Definition	Displays the minimum volume (in cubic feet or meters) that must be sampled on each channel.
Generate	Press to set definitions for the room. (See Room Definition Screen below.)
Room Area	Select to print a single record or a range of records. (See Print Screen below.)

Room Definition Screen

Use this screen to define specific values for the room. Press **OK** when finished.


Room Definition
10/03/08
9:45:27 AM

Room Status

Air Flow

Class

Area
 ft² m²



Field	Description
Room Status	Select the room status: As Built, At Rest, or Operational.
Air Flow	Select the air flow: Unidirectional or Non-unidirectional.
Class	Select the class of the room: The class is dependent on the standard: FED FT3: 1, 20, 100, 1000, 10000, 100000 FED M3: M1.0, M1.5, M2.0, M3.0, M3.5, M4.0, M4.5, M5.0, M5.5, M6.0, M6.5, M7.0 ISO14644-1: 1, 2, 3, 4, 5, 6, 7, 8, 9 EC GMP: A, B, C, D
Area	Use the on-screen keyboard to enter the area of the room in ft ² or m ³ .

Generate Screen

This screen lets you generate the report using either a single record or a range of records. Press the **Generate...** button to generate the selected report.

Generate... 10/03/08 9:47:47 AM

Select range used for reports.

All

Records

1 — 107

Generate...

Close

The generated report will be displayed on the screen and may be viewed on the screen or printed (optional 8930 printer must be attached) by pressing the **Print** button.

Fed Std 209E M 10/03/08 9:52:23 AM

Federal Standard 209E_M

**** Model ****

Serial Number: xxxxxxxx

Targeted Class: M7.0

Room Area: 100m^2

Room Status: Operational

Air Flow: Unidirectional

Min Locations: 3

Min Samples/Room: 5

Print Close

CHAPTER 4

Data Handling

USB Computer Communication

The Model 9306 AEROTRAK™ Handheld Airborne Particle Counter is equipped with a USB compatible cable for uploading and downloading information to a PC. The cable plugs into the right side of the instrument.




Installing Software

The TRAKPRO™ Lite Data Transfer utility comes on a CD that loads software and communications drivers for the particle counter. To install the software, insert the CD into your computer drive and follow the instructions. Installation consists of two parts:

- Installation of TRAKPRO™ Lite software.
Run “setup.exe” from the provided CD and follow on-screen instructions.
- Installation of USB NDIS driver. This installation is executed transparently during the setup process and does not require user input. Once installation is finished, drivers are ready for use. When Model 9306 AEROTRAK™ particle counter is connected for the first time, the system will automatically detect the device and will start driver installation process.



1. When asked if Windows update should be used to download necessary software, select “No, not this time” and click **Next**.

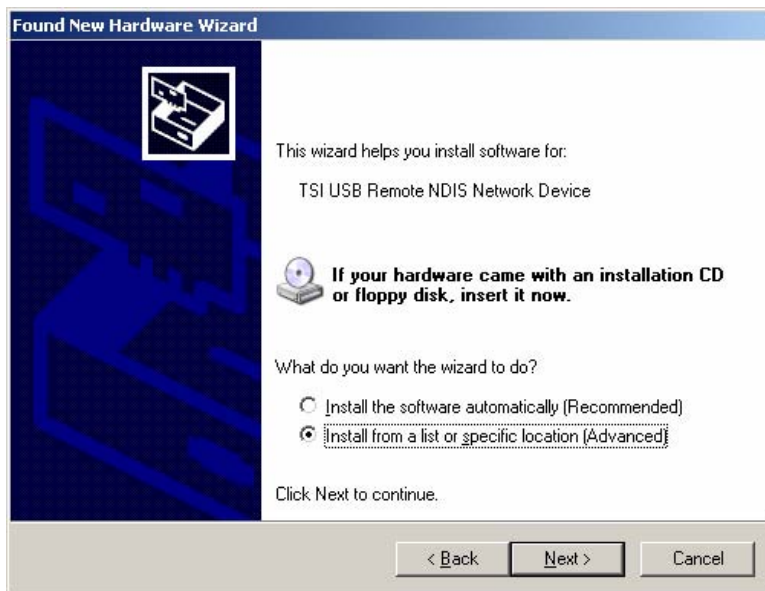

2. Select “Install the software automatically (Recommended)” and click **Next**.

3. The Hardware Wizard will search for the driver and locate it in \System32\drivers directory.

Once that is done, the following screen will appear:



4. Depending on your system setup you may see a warning message:



5. Click **Continue Anyway** and the installation will proceed.




6. Once everything is completed, click **Finish**.

This procedure is required only on first connection, all subsequent devices will automatically locate the necessary drivers and install without requiring user input.

Download Data

To transfer data from an instrument to a computer via the USB connection for further analysis and report generation.

- Make sure that AEROTRAK™ particle counter is attached to the computer and turned on.
- Start the application. If the AEROTRAK™ particle counter is not connected or discovered by the application, the following message appears:

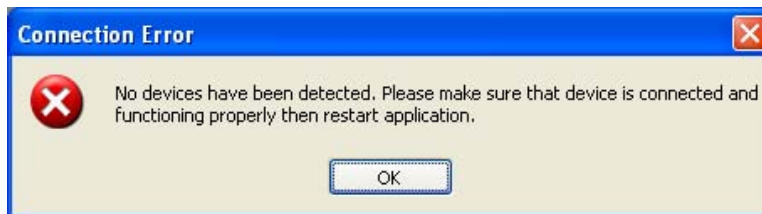


- Make sure that the AEROTRAK™ particle counter is connected, turned on, and functioning properly. Restart the application.

If communication with AERO^{TRAK}™ particle counter has been established, the following screen appears:




Once data is successfully downloaded, the main application screen will appear:

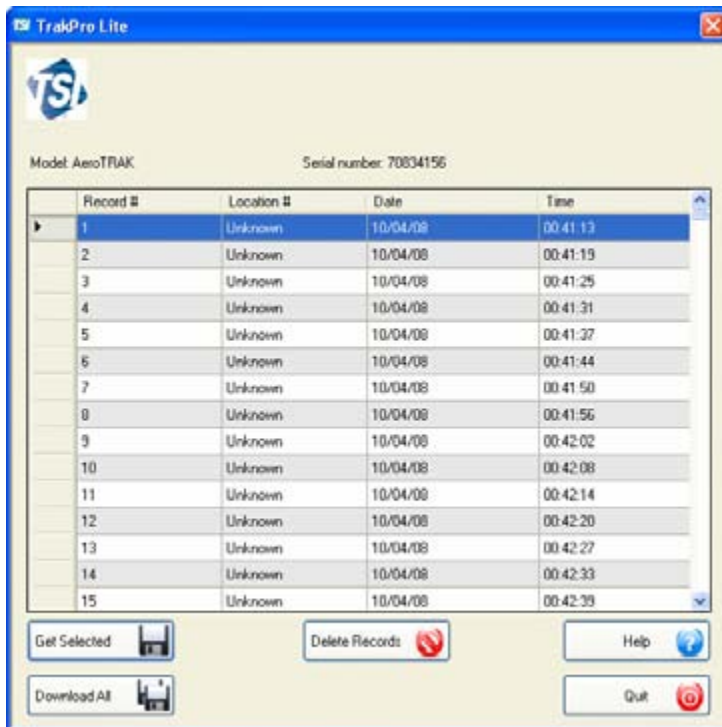

1. There are two options for downloading data:

- Download only user selected records:
Hold down the **CTRL** key and use the mouse to click on the records you want to retrieve. When you have selected the records, press the **Get Selected** button to retrieve only the selected records from the device.
- Download all records:
Press the **Download All** button to retrieve all the records from the device.

- After you press either the **Get Selected** or **Download All** buttons, the following dialog appears to allow you to select the folder where data will be saved:

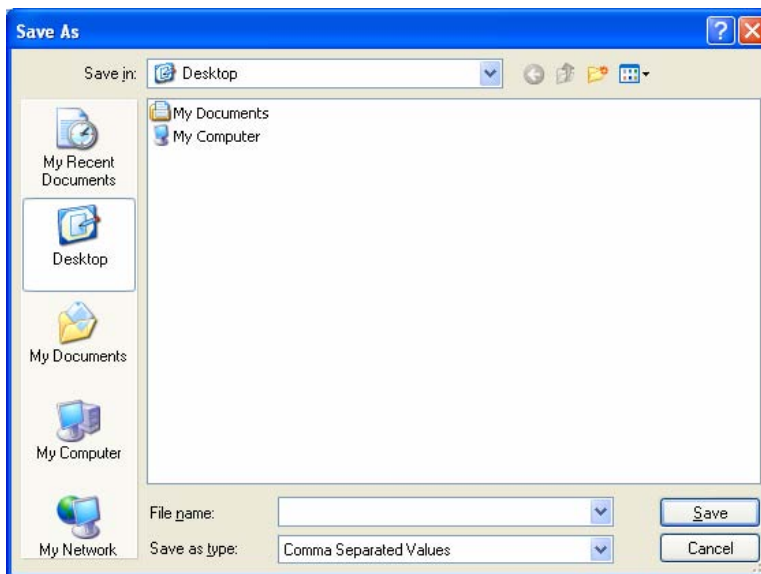


- To cancel the data transfer, select **Cancel**.
- To accept the data transfer, enter the file name under which data will be saved and select **Save**.
- Data is stored in a .CSV file that can be opened by most spreadsheet programs such as Microsoft® Excel® spreadsheet software.


	A	B	C	D	E	F	G	H	I	J	K	L
1	Record#	Location#	Date	Time	SampleTime	HoldTime	Ch1	Ch2	Ch3			
2												
3	1	118	1/15/2000	2:08:20	1:00	0:00	0.3um	75628	2.5um	71882	5.0um	1264
4	2	111	1/15/2000	2:09:59	0:05	0:00	0.3um	6314	2.5um	6014	5.0um	1279
5	3	111	1/15/2000	2:10:06	0:05	0:00	0.3um	5960	2.5um	5665	5.0um	1246
6	4	111	1/15/2000	2:10:12	0:05	0:00	0.3um	6465	2.5um	6144	5.0um	1195
7	5	111	1/15/2000	2:10:18	0:05	0:00	0.3um	6476	2.5um	6155	5.0um	1285
8	6	111	1/15/2000	2:39:44	0:05	0:00	0.3um	6410	2.5um	6106	5.0um	1493
9	7	111	1/15/2000	2:40:34	0:05	0:00	0.3um	5900	2.5um	5617	5.0um	1237
10	8	111	1/15/2000	2:40:40	0:05	0:00	0.3um	6226	2.5um	5923	5.0um	1298
11	9	111	1/15/2000	2:40:47	0:05	0:00	0.3um	6314	2.5um	5983	5.0um	1325
12	10	111	1/15/2000	2:40:53	0:05	0:00	0.3um	6015	2.5um	5729	5.0um	1264
13	11	111	1/15/2000	2:41:26	0:05	0:00	0.3um	6006	2.5um	5704	5.0um	1279
14	12	111	1/15/2000	2:46:21	0:05	0:00	0.3um	6035	2.5um	5753	5.0um	1246
15	13	111	1/15/2000	2:46:27	0:05	0:00	0.3um	5989	2.5um	5719	5.0um	1195
16	14	111	1/15/2000	2:46:34	0:05	0:00	0.3um	6041	2.5um	5750	5.0um	1285
17	15	111	1/15/2000	2:46:40	0:05	0:00	0.3um	5875	2.5um	5597	5.0um	1219
18	16	111	1/15/2000	2:46:46	0:05	0:00	0.3um	5083	2.5um	5634	5.0um	1229
19	17	111	1/15/2000	2:46:53	0:05	0:00	0.3um	5920	2.5um	5633	5.0um	1223
20	18	111	1/15/2000	2:46:59	0:05	0:00	0.3um	6001	2.5um	5731	5.0um	1270
21	19	111	1/16/2000	22:40:22	0:05	0:00	0.3um	1446	2.5um	1411	5.0um	678
22	20	111	1/17/2000	3:22:11	0:05	0:00	0.3um	6873	2.5um	6593	5.0um	3008
23	21	111	1/17/2000	3:22:17	0:05	0:00	0.3um	9623	2.5um	9204	5.0um	3656
24	22	111	1/21/2000	20:12:29	0:05	0:00	0.3um	16033	2.5um	15231	5.0um	4209
25	23	111	1/21/2000	20:12:35	0:05	0:00	0.3um	16113	2.5um	15304	5.0um	4209
26	24	111	1/21/2000	20:12:42	0:05	0:00	0.3um	16426	2.5um	15663	5.0um	4226

Delete Data

In order to delete data from the device click **Delete Records** button. The following warning will appear:

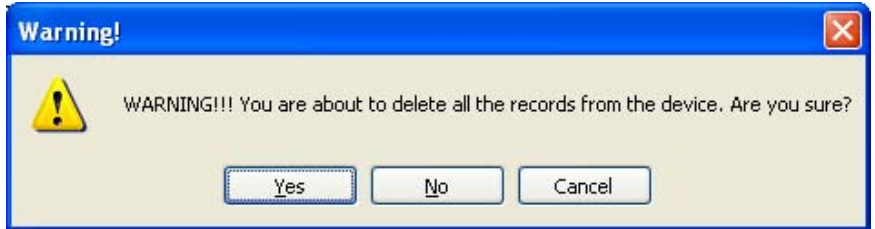

If **Yes** is selected, TRAKPRO™ Lite software will erase data from the device and also from application memory.

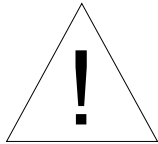

W A R N I N G
Deleting data is an irreversible operation. Download and save data <i>before</i> deleting in order to have a copy for future use.

CHAPTER 5

Maintenance

Note
There are no user-serviceable parts inside this instrument. Opening the instrument case may void the warranty. TSI recommends that you return the AEROTRAK™ Airborne Particle Counter to the factory for any required maintenance or service not described in this manual.

Maintenance Schedule

TSI recommends annual factory cleaning and calibration for the AEROTRAK™ Airborne Particle Counter. See [Chapter 7, "Contacting Customer Service"](#) for service/calibration.

Recommended Field Maintenance Schedule

Item	Frequency
Zero check	Daily or according to application.
Factory cleaning and calibration	Annually.
Cleaning the instrument enclosure	As needed.

Zero Check

The zero check ensures that the instrument is properly assembled and free from leaks, residual particles and electronic noise. Please see Chapter 2, "[Getting Started](#)" for detailed instructions on performing the zero check.

Cleaning the Instrument Enclosure


To clean the enclosure, dampen a lint-free cloth and gently wipe the surface until surface contamination is removed.



CHAPTER 6

Troubleshooting

Symptom	Possible Cause	Corrective Action
Counts are too low	Instrument is being operated outside temperature or relative humidity specifications Internal parts have been damaged because instrument was stored at a temperature greater than 122°F (50°C) Instrument has contamination on the optics due to condensation or excessive loading Laser or pump control is damaged Unit is due for calibration	Operate instrument within specifications Return to factory for service Return to factory for service Return to factory for service Return to factory for service
Instrument does not turn on	Battery is not charged AC cord is not plugged into unit	Recharge battery or connect to AC power Connect AC cord

continued on next page

Symptom	Possible Cause	Corrective Action
Instrument does not meet zero count specification (<1 particle/5 mins)	<p>HEPA filter is not connected properly and room air is leaking into the HEPA filter assembly</p> <p>Residual particles from previous samples are shedding off internal parts and into the optics</p> <p>An internal component has been damaged due to operation outside of temperature specifications or one or more excessive bumps or jolts, and electronic noise is inducing false counts</p> <p>A leak has developed in the aerosol flow path</p> <p>Internal optics have become dirty</p>	<p>Check that the HEPA filter has been tightly connected to the inlet. Check that rubber o-ring (black) on the inlet is in place</p> <p>Purge instrument by running the instrument for 10–15 minutes before attempting zero count test</p> <p>Return to factory for service</p> <p>Return to factory for service</p> <p>Return to factory for service</p>
Battery does not charge	The unit must be turned on but not in sampling mode for the battery to charge	Turn on unit.
LOW BATTERY ERROR 	Low battery	Recharge battery or connect AC cord
PHOTODETECTOR ERROR	<p>Direct light is entering the aerosol inlet</p> <p>Laser has become misaligned due to excessive bumps or jolts</p> <p>Internal optics have become dirty</p>	<p>Remove instrument from direct light</p> <p>Return to factory for service</p> <p>Return to factory for service</p>
SYSTEM ERROR	Information is not being read properly by microprocessor	Restart instrument. If problem persists, contact TSI technical support
TEMPERATURE HUMIDITY PROBE ERROR	Temperature/RH probe was not recognized	Detach and reconnect probe. If problem persists, contact TSI technical support

Symptom	Possible Cause	Corrective Action
<p>FLOW ERROR</p> 	<p>Instrument was unable to control flow rate (if any tubing is connected to particle counter)</p> <p>Pressure drop across inlet may be too large</p> <p>Inlet not at ambient pressure</p>	<p>Restart measurement</p> <p>Lessen pressure drop across inlet by using larger diameter tubing, less tubing, and/or adding a bleed valve</p> <p>Do not subject the unit to other than ambient pressure conditions</p>
<p>LASER POWER WARNING</p> 	<p>Laser power has fallen outside of specification</p>	<p>Return to factory for service</p>

CHAPTER 7

Contacting Customer Service

This chapter gives directions for contacting people at TSI Incorporated for technical information and directions for returning the Model 9306 AEROTRAK™ Handheld Particle Counter for service.

Technical Contacts

- If you have any difficulty setting up or operating the AEROTRAK™ Model 9306, or if you have technical or application questions about this system, contact an applications engineer at TSI Incorporated, 1-800-874-2811 (USA) or (651) 490-2811 or e-mail technical.service@tsi.com.
- If the AEROTRAK™ Model 9306, does not operate properly, or if you are returning the instrument for service, visit our website at <http://rma.tsi.com>, or contact TSI Customer Service at 1-800-874-2811 (USA) or (651) 490-2811.

International Contacts

Service

TSI Instruments Ltd.

Stirling Road
Cressex Business Park
High Wycombe, Bucks
HP12 3RT
UNITED KINGDOM

Telephone: +44 (0) 149 4 459200

Fax: +44 (0) 149 4 459700

E-mail: tsiuk@tsi.com

Web: www.tsinc.co.uk

Technical Support

TSI GmbH

Neuköllner Strasse 4
52068 Aachen
GERMANY

Telephone: +49 241-52303-0
Fax: +49 241-52303-49
E-mail: tsigmbh@tsi.com
Web: www.tsiinc.de

TSI Instruments Ltd.

Stirling Road
Cressex Business Park
High Wycombe, Bucks
HP12 3RT
UNITED KINGDOM

Telephone: +44 (0) 149 4 459200
Fax: +44 (0) 149 4 459700
E-mail: tsiuk@tsi.com
Web: www.tsiinc.co.uk

TSI France Inc.

Europarc Bât. D
26, rue John Maynard keynes
Technopôle de Château-Gombert
13013 Marseille
FRANCE

Telephone: +33 (0)4 91 952 190
Fax: +33 (0)4 91 952 191
E-mail: tsifrance@tsi.com
Web: www.tsiinc.fr

Returning the AEROTRAK™ Handheld Airborne Particle Counter for Service

Visit our website at <http://rma.tsi.com> or call TSI at 1-800-874-2811 (USA) or (651) 490-2811 for specific return instructions. Customer Service will need this information when you call:

- The instrument model number
- The instrument serial number
- A purchase order number (unless under warranty)
- A billing address
- A shipping address

Use the original packing material to return the instrument to TSI. If you no longer have the original packing material, seal off any ports to prevent debris from entering the instrument and ensure that the display and the connectors on the instrument front and back panels are protected.

APPENDIX A

Specifications

All specifications meet or exceed JIS B 9921. They are subject to change without notice.

Size Range	0.3–20 µm
Channel Sizes	Standard: 0.3, 0.5, 0.7, 1.0, 2.0, 5.0 µm Standard: 0.3, 0.5, 1.0, 3.0, 5.0, 10.0 µm Standard: 0.3 to 10 µm, user-selectable; factory-calibrated at 0.3, 0.5, 1.0, 3.0, 5.0, 10.0 µm. Additional channel sizes available
Counting Efficiency	50% @ 0.3 µm; 100% for particles > 0.45 µm (per JIS)
Concentration Limits	2,000,000 particles/ft ³ @ 5% coincidence loss
Light Source	Laser diode
Zero Count Level	<1 count/5 minutes, Meets JIS B9921
Flow Rate	0.1 CFM (2.83 L/min) with ±5% accuracy
Calibration	NIST traceable
Sample Probe/Tubing	Isokinetic sampling probe
Sampling Modes	Manual, automatic, beep, cumulative/differential count on concentration
Sampling Time	1 second to 99 hours
Sampling Frequency	1 to 9999 cycles or continuous
Sample Output	Internal HEPA filter
Vacuum Source	Internal pump
Communication Mode	USB output
Data Storage	10,000 samples
Data Security	Password protected
Alarm/Status	Audible alarm on counts, low battery, and sensor status indicators
Environmental Sensors	Optional temperature/RH probe supported
Display	QVGA 3.7-inch touch screen with Windows CE
Languages	English
Reports	FS-209E, ISO-14644-1 and EC GMP
Printer	Optional external printer supported
External Surface	High impact injection molded plastic
Power	110 to 240 VAC 50 to 60 Hz Universal in-line power supply
Battery	Removable Li-Ion
Battery Life	Up to 6 hours of continuous use

Recharge Time	3 hours
Dimensions (L x W x H)	25.4 x 11.4 x 7.6 cm (10 x 4.5 x 3 in.)
Weight	1.0 kg (2.2 lbs) with battery
Standards	CE, JIS B9921, ISO 21501-4
Warranty	2 years. Extended warranties available
Operating Conditions	5°C to 35°C; 20% to 95% non-condensing relative humidity
Storage Conditions	0°C to 50°C; Up to 98% non-condensing relative humidity
Included Accessories	Power supply, power cord, battery, isokinetic inlet, stylus, purge filter, TRAKPRO™ Lite data download software, operational manual on CD, computer cable, calibration certificate, and Quick Start Guide.
Optional Accessories	Temp R/H probe, stainless steel isokinetic inlet and probe, tubing, barbed inlet fitting, printer, printer paper, carrying case and external battery charger

Temperature/RH Probe (700031) Specifications (optional accessory)

Temperature	
Range	32 to 115°F (0 to 45°C)
Accuracy	±2°F (±1°C)
Relative Humidity	
Range	10 to 90% RH
Accuracy	±5% RH

TSI Incorporated – 500 Cardigan Road, Shoreview, MN 55126 U.S.A

USA	Tel: +1 800 874 2811	E-mail: aerotrak@tsi.com	Website: www.tsi.com
UK	Tel: +44 149 4 459200	E-mail: tsiuk@tsi.com	Website: www.tsiinc.co.uk
France	Tel: +33 491 95 21 90	E-mail: tsifrance@tsi.com	Website: www.tsiinc.fr
Germany	Tel: +49 241 523030	E-mail: tsigmbh@tsi.com	Website: www.tsiinc.de
India	Tel: +91 80 41132470	E-mail: tsi-india@tsi.com	
China	Tel: +86 10 8260 1595	E-mail: tsibeijing@tsi.com	



TRUST. SCIENCE. INNOVATION.

Contact your local TSI Distributor or visit our website www.tsi.com for more detailed specifications.